


DEMA 830 Laundry Master™ Installation Instructions

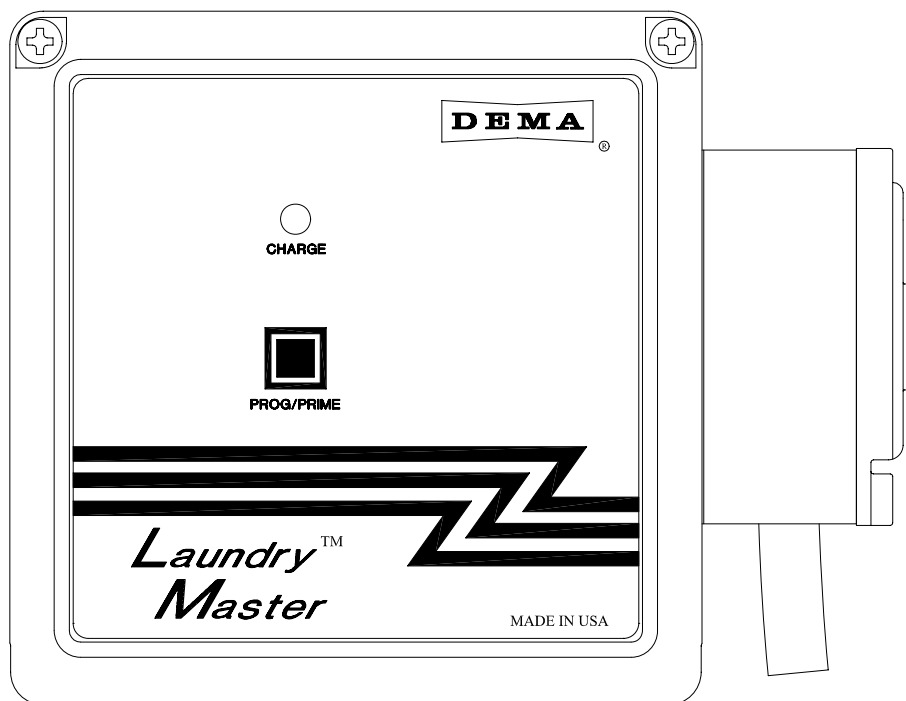

DEMA 830 Laundry Master™ Installation Instructions

SYSTEM OVERVIEW

The DEMA 830 Laundry Master is designed for long reliable use with simplicity in mind for both the installer and user. The system is based on the reliable DEMA peristaltic pump for liquid chemical or a solenoid operated water valve for dry chemical. The pump or water valve is installed in a heavy plastic housing with a sealed cover that uses a Lexan label for access of external control and visible indicators.

The pump is available in two different speeds, 60 and 105 RPM.

The control board will accept an AC or DC trigger signal from the laundry machine to control the operation of the pump or valve. All units are equipped with a built in transformer with primary voltages of 120, 208, and 240 at 50/60Hz.

Please read all instructions before proceeding with Laundry Master installation.

LAUNDRY ROOM SURVEY

A complete survey of the laundry room or site installation should be completed in advance of starting the Laundry Master installation.

1. Locate the power connection points on the laundry machine. This power must be between 95 and 250 volts 50/60Hz.
2. Select location to mount the Laundry Master on a wall that will allow access to the chemical product containers and the chemical product feed points on the laundry machine. The Laundry Master should be kept away from moisture releasing machinery and from water being splashed on the unit.
3. Mount the Laundry Master on a wall by use of the supplied hanger kit and screw and anchor kit.
Note: The supplied screw and wall anchors may not be suitable. The wall construction at point of installation should be evaluated to determine the proper type of screw and wall anchor.

ELECTRICAL INSTALLATION

All installations must be in accordance with city, county, state or provincial electrical codes and be performed by a certified electrician. For questions, please contact local licensed electrical contractor.


1. **BEFORE GOING ANY FURTHER, ALL ELECTRICAL POWER MUST BE TURNED OFF TO THE LAUNDRY MACHINE AND ANY OTHER CIRCUIT THAT IS TO BE USED FOR THIS INSTALLATION. LOCKOUT AND TAG PROCEDURES SHOULD BE OBSERVED WHEN INSTALLING THIS DEVICE. NEVER OPEN THE LAUNDRY MASTER UNLESS POWER HAS BEEN TURNED OFF. SIGNALS MAY BE PRESENT FROM LAUNDRY MACHINE, EVEN WITH THE LAUNDRY MASTER POWER TURNED OFF. ONLY USE ELECTRICAL CODE APPROVED INSULATED WIRING AND ELECTRICAL FIXTURES WITH THIS INSTALLATION.**
2. Connect the power to the Laundry Master. This may be 120V, 208V or 240V 50/60Hz. Power should be applied to Laundry Master anytime the laundry machine is on. Some laundry machines have a terminal block setup for power, see schematic or owners manual for the specific machine being used. Locate the power terminal block inside the Laundry Master enclosure. Connect “hot” or “live” wire to the terminal labeled “line”. Connect the “return line” to the appropriate terminal block position based on supply voltage. The “earth ground” wire must be fastened to the terminal block bracket by

DEMA 830 Laundry Master™ Installation Instructions

use of the supplied grounding clip. The power line should be secured by use of proper electrical fitting through access hole in Laundry Master enclosure. The power line must also be secured properly between the laundry machine or power source and Laundry Master.

3. Connect the trigger signal output to the Laundry Master. The trigger signal may be between 24V and 240V AC or DC. Some laundry machines are equipped with a terminal block that is designed to feed this signal. Locate the trigger connection points on the circuit board inside the Laundry Master enclosure. Run appropriate wiring between the laundry machine trigger connection points and the Laundry Master trigger connection points. Trigger lines should be properly secured by use of proper electrical fitting through access hole in Laundry Master enclosure. The signal line must be properly secured between the laundry machine and Laundry Master enclosure.

Note: When using a DC trigger source it is necessary to wire the positive lead to the trigger terminal pin that is identified with “+” symbol for proper operation. The positive pin can be identified by removing the modular connector from the board and observing the “+” symbol printed on the board.

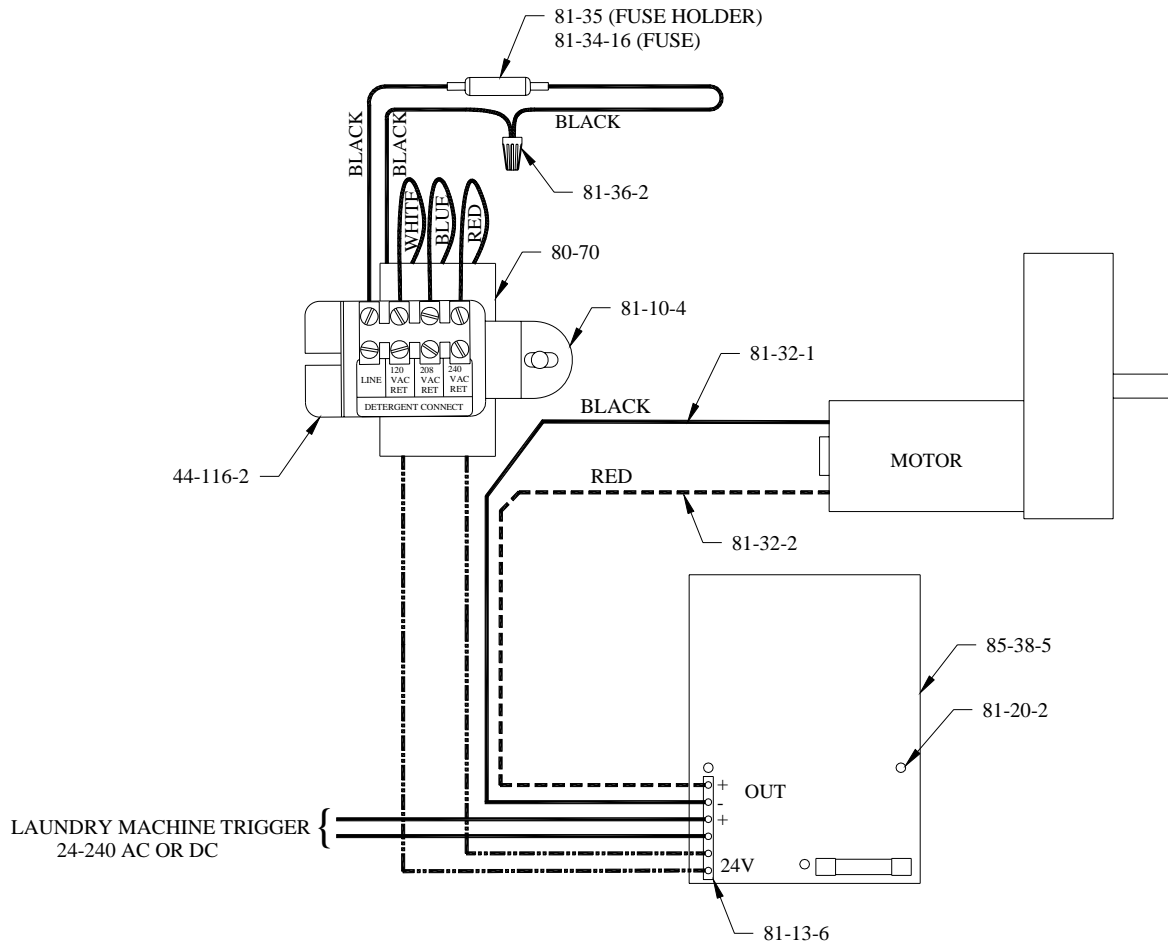

Wiring Diagram

DEMA 830 Laundry Master™ Installation Instructions

Tubing Connections

ALWAYS WEAR PROTECTIVE CLOTHING AND SAFETY EYEWEAR WHEN WORKING WITH CHEMICALS.

Included in the installation kit is a 20ft roll of LDPE tubing per pump to connect from the chemical container, via the pump, and to the fittings on the machine.

Liquid Detergent (pump)

Measure the length of the tubing needed for the suction side from the chemical container to the inlet of pump and cut the tubing to the proper length. Install LDPE tubing into pickup tubes (gray PVC) through compression nut until the tube is within ¼” of the other end of pickup tube. Tighten nut to secure. When properly installed the LDPE tubing will not stick out the open end of pickup tube. Route the tubing to the suction side of the pump and insert into squeeze tube approximately ½”. Secure the tubing together by tightening a cable tie around the squeeze tube. Use the same procedure on the outlet of the squeeze tubing and route the LDPE tubing to the injection feed points of the machine. Cut off all excess tubing and keep tubing away from hot surfaces and sharp edges to prevent damage or leakage.

Dry Detergent (valve)

Use ¼” compression fittings to connect ¼” LDPE tubing between the outlet of the solenoid valve on Laundry Master and the inlet of the siphon breaker on the dry chemical product dispenser.

At this point the Laundry Master installation is complete.

PROGRAMMING, OPERATION AND SETUP (Jumpers and Lockout Time)

General Operation

When a trigger signal is received from the laundry machine, the control will run its program. A two-second delay will occur to make sure the trigger is not a false signal. The control will then delay operation for the programmed delay time. This allows the laundry machine time to fill with water before adding chemical. At the end of this delay the pump will run for the programmed time. The control will then lockout, preventing re-triggering for programmed period of time.

Jumper Installation

See figure 1, 2, and 3 for proper jumper installation.

- When the jumper is in the off position the board is set up for receiving triggers from the laundry machine (See Figure 2).
- When the jumper is in the on position, the control board is set up to operate using the DEMA optional remote kit (See Figure 1).

DEMA 830 Laundry Master™ Installation Instructions

JUMPER SHOULD BE ON THESE 2 PINS WHEN USING THE REMOTE SWITCH KIT

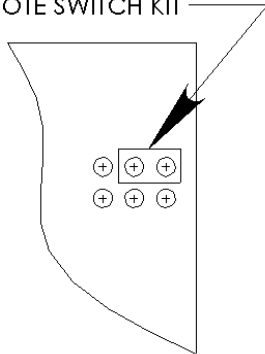


Figure 1

JUMPER SHOULD BE ON THIS PIN WHEN USING A TRIGGER SIGNAL FROM A LAUNDRY MACHINE


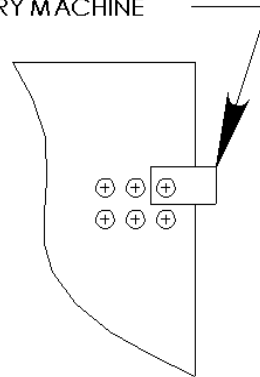


Figure 2

DIP SWITCHES

JUMPER (SEE FIGURE 1 AND 2)

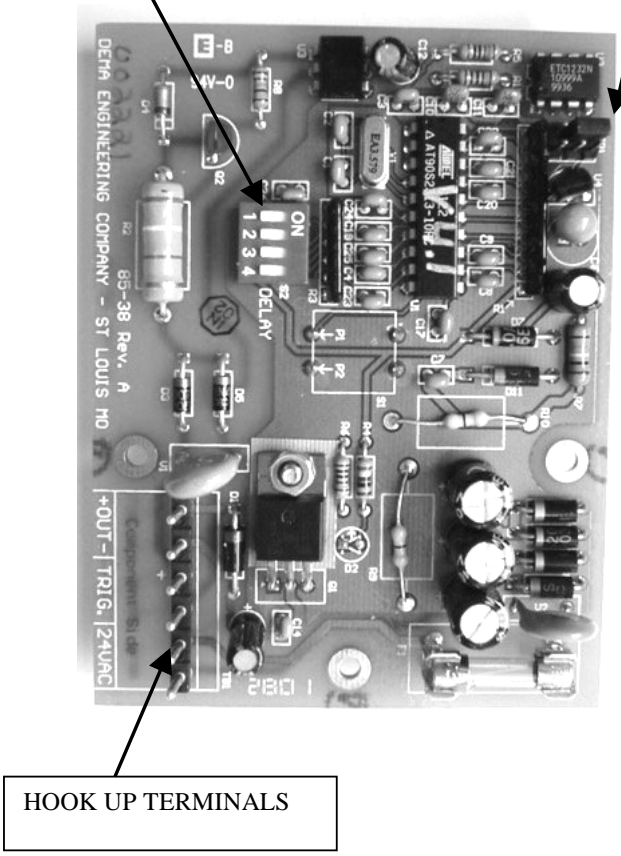

HOOK UP TERMINALS

Figure 3

DEMA 830 Laundry Master™ Installation Instructions

Programming

It is helpful to know the amount of chemical product to be dispensed before programming the Laundry Master. To assure that a specific application is satisfied, it is recommended that the output rate of the specific chemical product be measured by use of a graduated cylinder.

The programming function will set the delay time and the amount of time that the pump will run when a trigger signal is received from the laundry machine.

1. Note that the front face of the Laundry Master has a button labeled “PROG/PRIME” and a round window labeled “CHARGE”.
2. Press and hold the “PROG/PRIME” button to activate the programming function. The “CHARGE” light will illuminate. Continue holding the button for about 8 seconds until charge light goes out, turns on, and then begins flashing. Release the button.
3. The “CHARGE” light will continue to flash. The delay time is now being recorded. This time can be set between 0 and 4 minutes 15 seconds.

Note: The delay time has been extended on some new units to have a maximum setting of 60 minutes. To identify if the unit to be programmed has this capability look for a label on one of the components on the circuit board that reads V6.0. If the label reads anything but V6.0 it only has a maximum delay time setting of 4 minutes and 15 seconds.

4. Press the “PROG/PRIME” to stop the delay time. The pump will begin to run. The pump run time is now being recorded. The minimum amount of time is 1 second and the maximum amount of time is 4 minutes and 15 seconds.
5. Allow Laundry Master to pump for the desired amount of time. Push the “PROG/PRIME” button to set that amount of time and exit the programming function.

Lockout Time

The lockout time is set via four DIP switches found on the control board inside the Laundry Master enclosure. See Figure 3 for DIP switch location.

| Lockout Time | Switch 1 | Switch 2 | Switch 3 | Switch 4 |
|--------------|----------|----------|----------|----------|
| 0 Minutes | OFF | OFF | OFF | OFF |
| 5 Minutes | ON | OFF | OFF | OFF |
| 10 Minutes | OFF | ON | OFF | OFF |
| 15 Minutes | ON | ON | OFF | OFF |
| 20 Minutes | OFF | OFF | ON | OFF |
| 25 Minutes | ON | OFF | ON | OFF |
| 30 Minutes | OFF | ON | ON | OFF |
| 35 Minutes | ON | ON | ON | OFF |
| 40 Minutes | OFF | OFF | OFF | ON |
| 45 Minutes | ON | OFF | OFF | ON |
| 50 Minutes | OFF | ON | OFF | ON |
| 55 Minutes | ON | ON | OFF | ON |
| 60 Minutes | OFF | OFF | ON | ON |
| 65 Minutes | ON | OFF | ON | ON |
| 70 Minutes | OFF | ON | ON | ON |
| 75 Minutes | ON | ON | ON | ON |

DEMA 830 Laundry Master™ Installation Instructions


Testing the Program

Pressing and holding the “PROG/PRIME” button activates the test function. The “CHARGE” light will illuminate. Continue holding the button for about five seconds until charge light goes out. Release the button. Then press and release “PROG/PRIME” button within ½ second. The “CHARGE” light will illuminate indicating the program is running. It will stay illuminated for the delay time. The light will be illuminated and the pump will run for the programmed time. The lockout time will be ignored at the end of the test.

Priming


The prime function will run the pump for the length of time that the “PROG/PRIME” button is pressed. This function is used to prime an empty suction and discharge tube. Pressing and holding the “PROG/PRIME” button activates the prime function. The “CHARGE” light will illuminate. Continue holding the button for about five seconds until charge light goes out. Release the button. Then press and hold “PROG/PRIME” button for as long as needed to prime the pump and tubing.

Replacement Parts

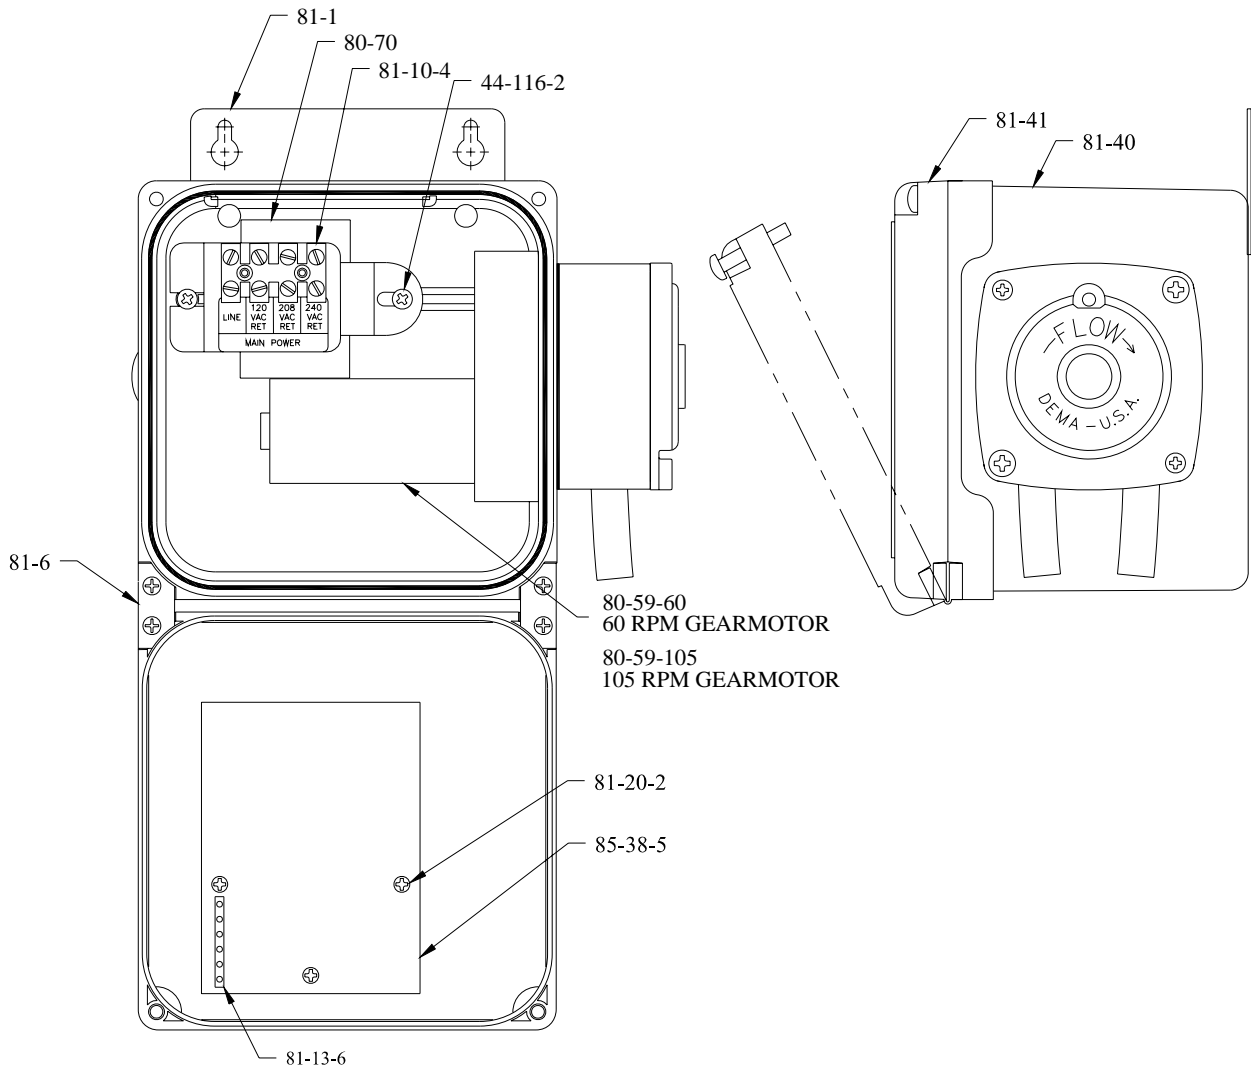

DEMA 830 Laundry Master™ Installation Instructions


| DEMA General Replacement Parts | |
|---------------------------------------|---|
| DEMA Part Number | Description |
| 81-40 | Laundry Master box with gasket and threaded inserts |
| 81-41 | Laundry Master box lid with captive screws |
| 80-70 | Transformer (40VA) |
| 81-10-4 | Terminal Block and Bracket Assy |
| 44-116-2 | #8 X 3/8" Hi-Lo Screw (used for mounting transformer) |
| 85-38-5 | Single Product Laundry Control Board (circuit board) |
| 81-20-2 | #4 Hi-Lo Screw (used for mounting circuit board) |
| 81-13-6 | Modular 6 Pole Terminal Block (used on circuit board) |
| 80-59-60 | 60 RPM Gear/Motor |
| 80-59-105 | 105 RPM Gear/Motor |
| 81-35 | Fuse Holder |
| 81-34-16 | Fuse 1A 250V |
| 81-36-2 | Wire Nut |
| 81-32-1 | Black Cable Assembly (motor hook up) |
| 81-32-2 | Red Cable Assembly (motor hook up) |
| 81-6 | Hinge and Screw Kit |
| 81-1 | Mounting Bracket Kit |

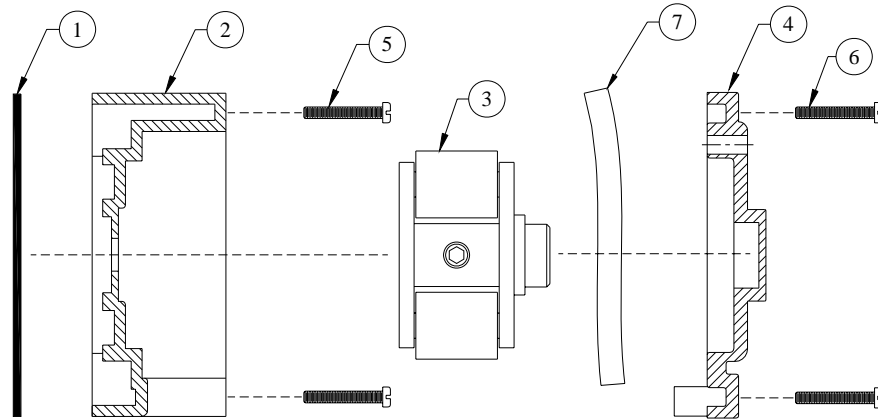

C2 PUMP ASSEMBLY

| DEMA C2 Pump Parts | | |
|---------------------------|----------------------|--|
| No. | DEMA Part No. | Description |
| 1. | 25-91-C2 | C2 Pump Head Gasket |
| 2. | 25-67C2-2 | C2 Pump Head |
| 3. | 25-84C2 | C2 Roller Block (2 roller) |
| 4. | 25-83C2-2 | C2 Face Plate |
| 5. | 25-85S | #10-32 X 1 3/4" Machine Screw |
| 6. | 25-85L | #10-32 X 2 1/4" Machine Screw |
| 7. | 25-65CE-11 | Squeeze Tube for C4 Pump |
| 8. | 25-C2D | C2 Pump Head Kit (kit includes C2 Pump parts listed above) |

DEMA 830 Laundry Master™ Installation Instructions

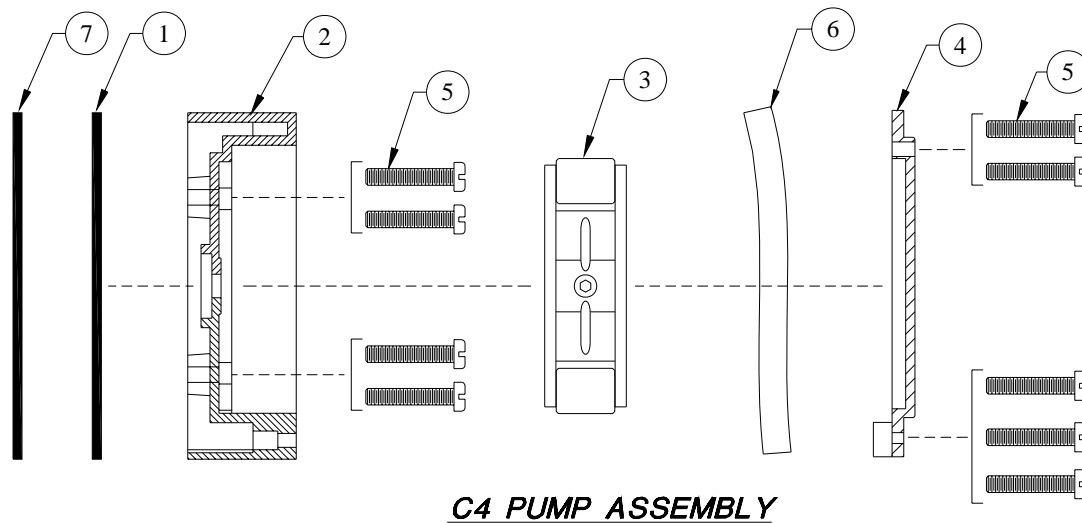

C4 PUMP ASSEMBLY

| DEMA C4 Pump Parts | | |
|--------------------|---------------|--|
| No. | DEMA Part No. | Description |
| 1. | 81-63 | C4 Adapter Plate |
| 2. | 25-114C4 | C4 Pump Head Gasket |
| 3. | 25-129-1 | C4 Pump Head Assembly |
| 4. | 25-86C4 | C4 Roller Block Assembly |
| 5. | 25-87C4 | C4 Face Plate |
| 6. | 25-85-5 | #10-32 X 1" Machine Screw |
| 7. | 25-89CE-14 | Squeeze Tube for C4 Pump |
| 8. | 25-130-1 | C4 Pump Head Kit (kit includes C4 Pump parts listed above) |

| DEMA Laundry Master Accessories | |
|---------------------------------|---|
| DEMA Part Number | Description |
| 25-68-20 | 20 ft 1/4" O.D. LDPE Tubing (used on C2 Pump) |
| 25-68-40 | 40 ft 1/4" O.D. LDPE Tubing (used on C2 Pump) |
| 25-68-60 | 60 ft 1/4" O.D. LDPE Tubing (used on C2 Pump) |
| 25-68-80 | 80 ft 1/4" O.D. LDPE Tubing (used on C2 Pump) |
| 25-68-100 | 100 ft 1/4" O.D. LDPE Tubing (used on C2 Pump) |
| 25-68-120 | 120 ft 1/4" O.D. LDPE Tubing (used on C2 Pump) |
| 25-115 | 20 ft 3/8" O.D. LDPE Tubing (used on C4 Pump) |
| 25-115-40 | 40 ft 3/8" O.D. LDPE Tubing (used on C4 Pump) |
| 25-115-60 | 60 ft 3/8" O.D. LDPE Tubing (used on C4 Pump) |
| 25-115-80 | 80 ft 3/8" O.D. LDPE Tubing (used on C4 Pump) |
| 25-115-100 | 100 ft 3/8" O.D. LDPE Tubing (used on C4 Pump) |
| 25-115-120 | 120 ft 3/8" O.D. LDPE Tubing (used on C4 Pump) |
| 80-66 | 10" PVC Pick Up Tube (used with 1/4" LDPE tubing) |
| 80-66-2 | 18" PVC Pick Up Tube (used with 1/4" LDPE tubing) |

Return Policy No merchandise may be returned for credit without DEMA Engineering Company's written permission. Return Merchandise Authorization (RMA) number required in advance of return.

Warranty DEMA products are warranted against defective material and workmanship under normal use and service for one year from the date of manufacture. This limited warranty does not apply to any products which have a normal life shorter than one year or failure and damage caused by chemicals, corrosion, improper voltage supply, physical abuse or misapplication. Rubber and synthetic rubber parts such as "O"-rings, diaphragms, squeeze tubing and gaskets are considered expendable and are not covered under warranty. This warranty is extended only to the original buyer of DEMA products. If products are altered or repaired without prior approval of DEMA, this warranty will be void.

Defective units or parts should be returned to the factory with transportation prepaid. If inspection shows them to be defective, they will be repaired or replaced without charge. F.O.B. factory DEMA assumes no liability for damages. Return merchandise authorization number to return units for repair or replacement must be granted in advance of return.